



LASER PEN

INSTRUCTION

It is a wireless presenter as a remote control, a laser pointer and portable storage device. It is tailored as a handy-tool for presentations, teaching, meetings, speeches, trainings. It consists of two parts: transmitter and USB receiver.

SETUP

Plug the receiver into the USB port on your PC . The system will automatically search for the new hardware and complete the setup. (Attention : you may need Win98 disk if your computer runs under Win98/SE operating system...PLS keep clear away of and objects which are in front of receiver between 45°radius.)




FUNCTION

Button B Laser pointer.

Button A page/scroll up function.

Button C page/scroll down function.

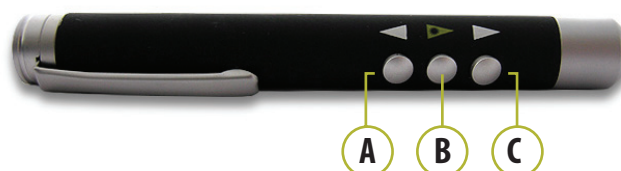

TECHNICAL PARAMETERS

Class	Class II
Technology	Infrared Frequency
Control distance	>15m
Laser distance	>200m
Battery	Cells button *3
Working voltage	4.5V
Sleep current	1uA
Wavelength	650nm
Max output	<1mW
Dimension	L=11.7cm ø=1.3cm
Operation system	Windows98/Se/Me/2000/XP Vista - Win7 - Mac OS - Linux
Compatible plug	USB 1.1 USB 2.0
Working voltage	4.5V
Dimension	ø14mm* 119mm



Warning: To avoid the laser radiation to direct eyes !