



Assembly instructions

- 1 Insert the end covers (v) in the profiles (p1) and 2 fix them with the nuts (B).
- 3 Assembly the vertical connector with the nuts () and 4 position the support cover c.
- 5 Connect and fix the Link with the part (A) using the axis (D) and the screws (C).
- 6 Insert the link by sliding from side into the profile (p2).
- 7 Insert the shelf connector into the vertical profile (p3) sliding from top and 8 fix with the screw (D).
- 9 Positioning and fix the shelf with the screws (C).
- 10
- 11 Fix both groups to the TV unit 12 finally fix the position with the socket screws (C). Regulate the viewing angle from *.
- 13 Insert the vertical profile and fix with the screws (B).

Hardware Kit

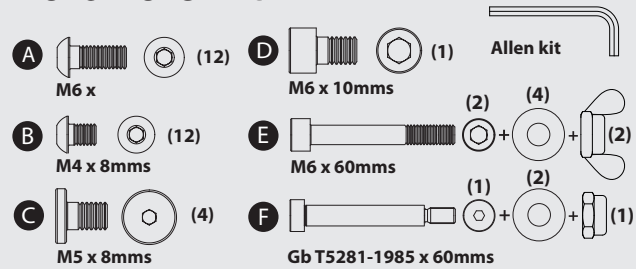

WARNINGS

Safety warning: Be careful to make sure there are not missing or defective parts. Improper installation may cause damage or serious injury.

NOTE 1: The included hardware is for mounting on wall. If you are uncertain about the nature of your wall, consult an expert. Please consult your hardware or installation professional for proper mounting to other types or walls. The supplied hardware is not for steel.

NOTE 2: Not all of the hardware in the kit will be used. Do not force any bolts.

NOTE 3: Do not mount onto plasterboard or panelled walls.

NOTE 4: Do not mount the bracket alone, seek help from another person.

